




## Charger, Challenger, 300, Durango, Grand Cherokee Elimivibe Engine Mount Instructions

If your vehicle has engine mount adapters like shown in the picture below, you will need to remove them and install them onto your new Elimivibe engine mounts. Ensure to leave the nut loose until the mounts are lined up in the vehicle with all engine mount hardware finger tight. Once you have the Elimivibe mounts in your vehicle, tighten the top nut to 59 ft-lbs. Now tighten the two bolts that go through the engine mount adapter to the engine mount bracket to 59 ft-lbs. Lower engine down til it is completely resting on the engine mounts. Using the supplied bolts, tighten the two bolts that go into the subframe to 35 ft-lbs. (If your vehicle uses these adapters, you will not use supplied line-up pins).

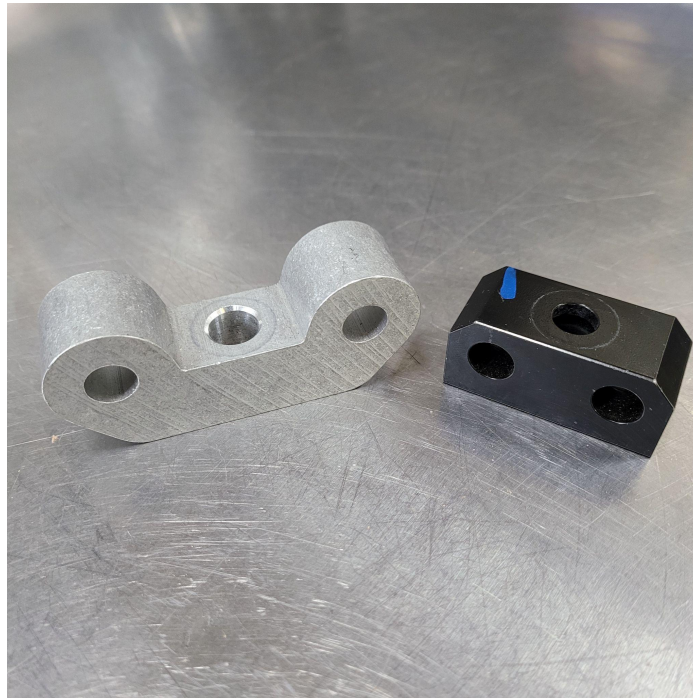

If your vehicle does not have these adapters, install the supplied line-up pins into the top of the engine mounts using a small screwdriver. Install the engine mounts into the vehicle and tighten the top nut to 59 ft-lbs. Using the supplied bolts, tighten the two bolts that go into the subframe to 35 ft-lbs.